BF641-SERIEN

Inbyggnadsugn

bruksanvisning

föreställ dig möjligheterna

Tack för att du har valt att köpa en produkt från Samsung. Registrera din produkt på adressen

www.samsung.com/register

SAMSUNG

BF641-Series_XEE-00142V-01_SE.indd 1 2010-08-16 2:29:24

Använda bruksanvisningen

SE

Tack till ditt val av en SAMSUNG inbyggnadsugn.
Denna bruksanvisning innehåller viktig information om säkerhet och instruktioner avsedda att vägleda dig vid användning och underhåll av denna apparat.
Ta god tid på dig att läsa denna bruksanvisning innan du använder ugnen och behåll denna bok för framtida referens.
Följande symboler används i texten i denna bruksanvisning.

Viktigt

OBS!

Säkerhetsanvisningar

Installationen av denna ugn måste utföras av en behörig elektriker. Installatören ansvarar för anslutning av apparaten till strömförsörjningen med beaktande av tillämpliga säkerhetsrekomme ndationer.

Elektrisk säkerhet

Om ugnen har skadats under transport, får den inte anslutas.

- Denna apparat får endast anslutas till strömförsörjningen av en **särskilt behörig elektriker**.
- Vid fel eller skada på apparaten, skall du inte försöka använda den.
- **Reparationer** får endast utföras av en**behörig elektriker**. En felaktigt utförd reparation kan leda till allvarliga skador för dig och andra. Om din ugn behöver repareras, kontakta SAMSUNG servicecenter eller din återförsäljare.
- Om nätsladden är defekt skall den bytas ut mot en specialsladd eller en enhet som är tillgänglig hos tillverkaren eller en auktoriserad servicetekniker.
- Elektriska ledningar och kablar får inte komma i kontakt med ugnen.
- Ugnen skall anslutas till strömförsörjningen med en godkänd kretsbrytare eller säkring. Använd aldrig grenuttag eller förlängningssladdar.
- Märkplåten är placerad till höger om luckan.
- Apparatens strömförsörjning skall kopplas från vid reparation eller rengöring.
- Var försiktig vid anslutning av elektrisk utrustning till uttag i närheten av ugnen.

VARNING

Utrustningen skall kopplas från strömförsörjningen vid utbyte av lampa för att undvika risk för elektrisk stöt. Vid användning av ugnen blir de inre ytorna mycket heta.

BF641-Series_XEE-00142V-01_SE.indd 2 2010-08-16 2:29:24

Säkerhetsanvisningar (fortsättning)

SE

Säkerhet under användning

- Denna ugn är endast avsedd för tillagning av mat för hushållsanvändning.
- Under användning blir ugnens inre ytor tillräckligt heta för att orsaka brännskador. Rör inte vid värmeelementen eller ugnens inre ytor förrän de svalnat.
- Förvara aldrig antändbara material i ugnen
- Ugnens ytor blir heta när apparaten används vid hög temperatur under en längre tid.
- Vid tillagning, var försiktig då du öppnar ugnsluckan, eftersom het luft och ånga snabbt strömmar ut.
- Vid tillagning av rätter som innehåller alkohol, kan alkoholen dunsta vid höga temperaturer och ångan kan fatta eld om den kommer i kontakt med ugnens heta delar.
- För din säkerhet skall du inte använda apparaten med ång- eller högtrycksapparater.
- Barn skall hållas på säkert avstånd när ugnen används.
- Frysta livsmedel, som t.ex. pizza, skall tillagas på grillgallret. Om bakplåten används, kan den deformeras p.g.a. de stora temperaturskillnaderna.
- Häll inte vatten i ugnens botten när den är het. Detta kan orsaka skada på den emaljerade ytan.
- Ugnsluckan skall vara stängd under tillagning.
- Var försiktig när du öppnar luckan i slutet av ångrengöringsproceduren; vattnet i botten är hett.
- Placera inte aluminiumfolie i botten av ugnen och placera inte bakplåtar eller formar på den. Aluminiumfolie blockerar värmen, vilket kan orsaka skador på den emaljerade ytan och därmed leda till dåliga tillagningsresultat.
- Fruktjuicer efterlämnar fläckar som kan vara omöjliga att få bort från ugnens emaljerade ytor. Vid tillagning av mycket mjuka kakor skall ett djupt kärl användas.
- Placera inte eldfasta lergods på den öppna ugnsluckan.
- Apparaten är inte avsedd att användas av små barn eller sjukliga personer utan övervakning av vuxen person som kontrollerar säker användning av apparaten.
- Håll uppsyn över barn så att de inte leker med apparaten.

Instruktioner för kassering

Kassera förpackningsmaterialet

- Materialet som används vid förpackning av denna apparat är återvinningsbart.
- Avfallshantering av förpackningsmaterial skall göras i lämplig container på din lokala avfallshanteringsplats.

Kassering av gamla apparater

VARNING

Innan en gammal apparat kasseras ska den göras obrukbar så att den inte kan utgöra en fara. **Gör detta genom att koppla bort apparaten från strömtillförseln och avlägsna nätsladden.**

För att skydda miljön är det viktigt att gammal utrustning kastas på rätt sätt.

- Apparaten får inte kastas som hushållsavfall.
- Information om insamlingstider och offentliga insamlingsplatser finns att få från kommunen eller det lokala sophanteringsföretaget.

BF641-Series_XEE-00142V-01_SE.indd 3 2010-08-16 2:29:24

Installation och underhåll

SE

Säkerhetsanvisningar för installation

Den här ugnen får bara installeras av en behörig elektriker. Installatören ansvarar för anslutning av apparaten till strömförsörjningen med beaktande av tillämpliga säkerhetsrekom mendationer.

- Se till att du inte skadar dig eller någon annan vid installationen.
- Köksskåpet i vilket ugnen är inbyggd måste uppfylla stabilitetskraven som anges i DIN 68930.

Tekniska specifikationer

Ingångsström/-frekvens	230 V ~ 50 Hz
Volym (användbar kapacitet)	65 ℓ
Utgångseffekt	max. 3400 W
Nettovikt	omkring 33 kg
Vikt med förpackning	omkring 38 kg
Mått (B x H x D)	595 x 595 x 566 mm
Ugnsinteriör (B x H x D)	440 x 365 x 405 mm

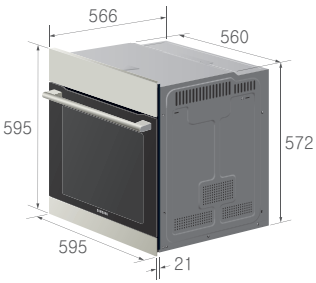

Strömanslutning

Om enheten inte är ansluten till huvudströmmen via kontakt måste en jordad kontakt (3 stift) anslutas för att uppfylla säkerhetsreglerna. Strömkabeln (H05 RR-F eller H05 VV-F, min. 1,5 m, 1,5 ~ 2,5 mm²) måste vara tillräckligt lång för att anslutas till ugnen, även om ugnen står på golvet framför det inbyggda skåpet. Öppna den bakre luckan på ugnen med en skruvmejsel och lossa skruvarna på kabelklämman innan du ansluter strömkablarna till relevanta anslutningsterminaler. Ugnen jordas via (⏚)-kontakten. Om ugnen ansluts till huvudströmmen med en kontakt måste kontakten vara åtkomlig efter att ugnen installerats. Samsung tar inget ansvar för olyckor till följd av felaktig jordning eller att jordning saknas.

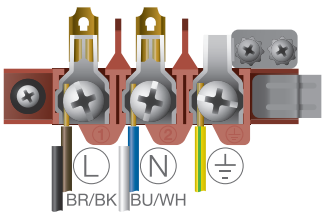

Installation i skåp

Det här är en inbyggd ugn, som måste installeras i ett övre eller nedre skåp.

- Observera miniavstånden.
- Fixera ugnen på båda sidor med skruvar

Efter installation avlägsnar du den skyddande vinylfilmen från luckan till enheten och skyddsfilmen från ugnens invändiga ytor.

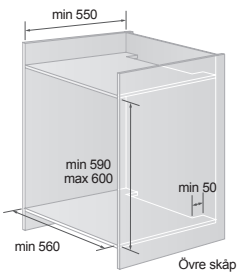

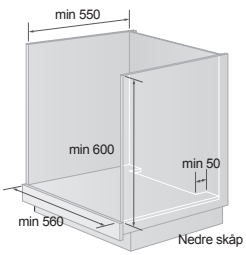

BF641-Series_XEE-00142V-01_SE.indd 4 2010-08-16 2:29:26

Delar och funktioner

SE

Ugnskontroller

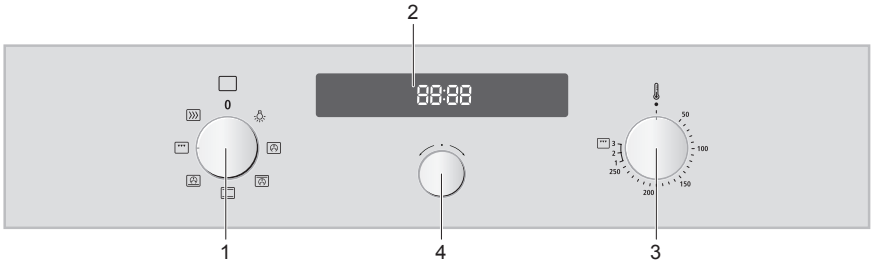

1. Funktionsvalsratt
2. Teckenfönster
3. Temperaturkontrollsratt
4. Tidsvalsratt

✉ **Främre design**
Den främre panalen finns att få med olika material och färger inklusive rostfritt stål, i vitt eller svart och i glas. För att höja kvaliteten kan utseendet förändras.

Tillbehör

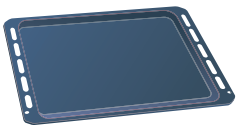

BAKPLÅT
Bakplåten kan användas för att förbereda kakor, tårtor och småkakor.

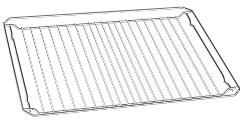

STORT GALLER
Det stora gallret ska användas för grillning. Du kan även använda det för att ställa grytor på.

☛ Se till att du monterar tillbehören korrekt på skenorna. Det måste var minst 2 cm mellan plåtarna neders i ugnen, annars kan den emaljerade ytan skadas.

☛ Var försiktig när du tar ut mat ur ugnen. Du kan bränna dig på maten eller på de varma ytorna!

BF641-Series_XEE-00142V-01_SE.indd 5 2010-08-16 2:29:27

Inställningar

SE

Tidsinställning

När du kopplar in strömmen för första gången ska du ställa in tiden innan du använder produkten.

1 Tryck på **tidsvalsratten**, när timindikeringen blinkar.

2 Vrid **tidsvalsratten**, ställ in önskad tid i timmar.

3 Tryck på **tidsvalsratten**, när minutindikeringen blinkar.

4 Vrid **tidsvalsratten**, ställ in önskad tid i minuter.

5 Tryck på **tidsvalsratten** för att bekräfta.

Ställ timer

1 Vrid **tidsvalsratten**, ställ in timertid.

2 Tryck på **tidsvalsratten** för att bekräfta.

✉ När timern är aktiverad visas markeringen "0" på skärmens vänstra sida och den roterar för att indikera processen.
Om du vill stoppa timeranvändningen ställer du timern på 0:00.
Under tiden den är aktiverad trycker du på tidsvalsknappen för att visa klockan för aktuell tid.

BF641-Series_XEE-00142V-01_SE.indd 6 2010-08-16 2:29:29

Användning av ugn

SE

Användning av snabbuppvärmningsläget ( )

Om du använder **SNABBUPPVÄRMNING** kan du öka temperaturen för att ställa in värdet snabbt.

Det här kommer drastiskt att förkorta väntetiden tills föruppvärmningen är klar.

Använd alternativet **SNABBUPPVÄRMNING** för att öka temperaturen till det inställda värdet tills föruppvärmningen är klar. Vrid sedan reglaget till tillagningsläge innan du fortsätter.

Du behöver dock inte använda **SNABBUPPVÄRMNING** för grillning av mat.

Använda tillagningsläge

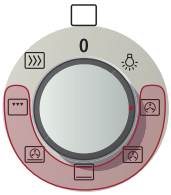

Grilltemperatur
1 Låg
2 Medium
3 Hög

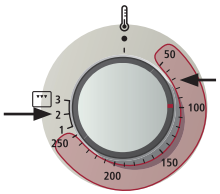

Ställ in temperaturen för all tillagning förutom grillning.

1 Vrid **funktionsvalsratten**, ställ in önskad tillagningstid.

2 Ange önskad temperatur genom att vrida **temperaturkontrollratten**.

✉ Om du väljer grillfunktionen och ställer in temperaturen mellan 50 °C och 250 °C, eller om du väljer normalt tillagningsläge och ställer in temperaturen mellan Grill 1 och 3, ombeds du återställa temperaturen med en signal och ett popupmeddelande.

Ugnens funktioner

	Varmluft Den hetta som genereras genom varmluftsfunktionen delas jämnt i ugnen via fläktar. Den här funktionen ska användas för frusna maträtter och vid bakning. Föreslagen temperatur: 170 °C
	Övervärme + varmluft Den hetta som genereras genom varmluftsfunktionen delas jämnt i ugnen via fläktar. Den här funktionen ska användas för att grilla exempelvis kött. Föreslagen temperatur: 190 °C
	Traditionell Värme kommer genom de övre och nedre värmesystemen. Den här funktionen ska användas för normal bakning och grillning av nästan alla typer av maträtter. Föreslagen temperatur: 200 °C
	Undervärme + varmluft Hettan genereras av det nedre värmesystemet och varmluften fördelas jämnt i ugnen via fläktar. Den här funktionen ska användas för pizza, bröd och vid bakning av kakor. Föreslagen temperatur: 190 °C
	Stor grill Värme alstras från det stora gillområdet. Den här funktionen ska användas för maträtter som lasagne och vid grillning. Föreslagen temperatur: Medium

BF641-Series_XEE-00142V-01_SE.indd 7 2010-08-16 2:29:30

SE

Testrätter

Enligt standard EN 60350

1. Bakning

Rekommendationerna för bakning gäller för en föruppvärmd ugn.

Typ av livsmedel	Maträtt & anteckningar	Hyllnivå	Tillagning-släge	Temp. °C	Tillagning-stid i min
Små kakor	Bakplåt	2	Traditionell	170-190	15-25
Fettfri sockerkaka	Bakform på grillgaller (mörk beläggning, ø 26 cm)	1	Traditionell	160-180	25-35
Äppelpaj	Grillgaller+ bakplåt + 2 kakformar med löstagbar botten (mörk beläggning, ø 20 cm)	1+3	Varmluft	170-190	80-100
	Grillgaller +2 kakformar med löstagbar botten (mörk beläggning, ø 20 cm)	1 Placerade diagonalt	Traditionell	180-200	75-90

2. Grillning

Förvärm den tomma ugnen i 5 minuter med hjälp av den stora grillfunktionen.
Använd denna funktion med den maximala temperaturinställningen.

Typ av livsmedel	Maträtt & anteckningar	Hyllnivå	Tillagning-släge	Temp. °C	Tillagning-stid i min
Varma smörgåsar på vitt bröd	Stort galler	5	Stor grill	hög	1:a: 1-2 2:a: 1-1½
Hamburgare	Stort galler Djup plåt (för uppsamling av dropp)	4 3	Stor grill	hög	1:a: 7-10 2:a: 5-8

BF641-Series_XEE-00142V-01_SE.indd 8 2010-08-16 2:29:30

Rengöring och skötsel

SE

Rengöring för hand

☛ Kontrollera att ugnen och tillbehören är svala före rengöring.

Ugnens insida

- Rengör både ugnens insida och utsida med en trasa och ett milt rengöringsmedel eller varmt tvålvatten.
- Rengör inte dörrtätningen för hand.
- Använd inte grova stålbollar eller kökssvampar.
- För att avlägsna envis smuts, använd en särskilt ugnsrengöringsmedel.
- Kåpan ska rengöras i varmt vatten, med rengöringsmedel och en mjuk nylonborste.

Använd inte frätande rengöringsmedel, hårda borstar, kökssvampar eller trasor, stålull, knivar eller andra frätande material.

Ugnens utsida

- Rengör både ugnens insida och utsida med en trasa och ett milt rengöringsmedel eller varmt tvålvatten.
- Torka med hushållspapper eller en torr handduk.
- Använd inte kökssvampar, frätande rengöringsmedel eller frätande rengöringsmedel.

Ugnsytor i rostfritt stål

- Använd inte stålull, kökssvampar eller frätande rengöringsmedel. Dessa kan skada ytan.

Ugnsfronter i aluminium

- Torka försiktigt av plattan med en mjuk trasa eller en trasa i mikrofibrer och ett milt fönsterputsmedel.

Tillbehör

Rengör tillbehöret efter varje användning och torka av med kökshandduk. Vid behov, lägg i varmt tvålvatten i omkring 30 minuter för enklare rengöring.

Borttagning av lucka

Ugnsluckan bör inte avlägsnas vid normal användning, men om den måste tas bort för t.ex. rengöring, skall dessa instruktioner följas. OBS: Ugnsluckan är tung.

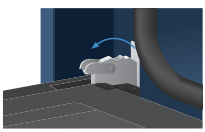

1 Öppna luckan och vrid upp klämmorna helt på de båda gångjärnen.

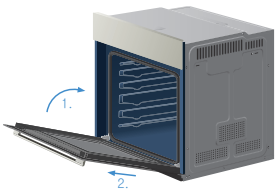

2 Stäng luckan till en vinkel på omkring 70°. Greppa i båda sidorna av ugnsluckans mitt och dra i den tills gångjärnen kan tas ut.

BF641-Series_XEE-00142V-01_SE.indd 9 2010-08-16 2:29:32

SE

Avlägsning av luckans fönster

Ugnsluckan är försedd med tre glasrutor som är placerade mot varandra. De här rutorna kan plockas bort för rengöring.

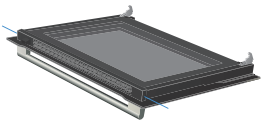

1 Avlägsna de två skruvarna på vänster och höger sida om luckan.

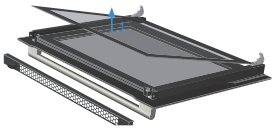

2 Plocka isär skyddet och avlägsna glasruta 1 från luckan.

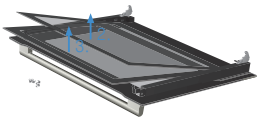

3 Lyft glasruta 2 och plocka bort de båda hållarna i gummi från övre delen av rutan och avlägsna sedan ruta 3. Rengör rutorna med varmt vatten eller med en mjuk och ren trasa.

- ✉ Luckans glas varierar från modell till modell och från 2EA till 4EA. Däremot är metoden för demontering och montering samma.
- ✉ Vid montering av innerglas 1, skriv ut enligt riktningen nedan.

Byte av lampa

☛ Risk för kortslutning!
Vidta följande åtgärder innan du byter ugnslampa:

- Slå av ugnen.
- Koppla ur ugnen från strömkällan.
- Skydda ugnens glödlampa och glashölje genom att lägga en trasa på botten av ugnen.
- Lampor kan inhandlas från närmaste SAMSUNG servicecenter.

Bakre ugnslampa

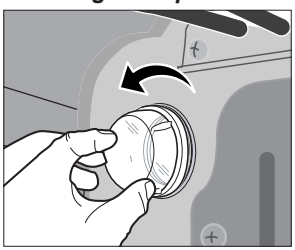

1. Avlägsna höljet genom att vrida moturs och avlägsna metallringen, falsring och rengör glaset. Vid behov kan glödlampas bytas ut mot en 25 watts, 230 V, 300 °C värmetålig ugnsglödlampa.
2. Rengör glaset, metallringen falsringen vid behov.
3. Montera metallringen på glashöljet.
4. Placera glaset där du har avlägsnat det i steg 1 och vrid medurs för att hålla på plats.

BF641-Series_XEE-00142V-01_SE.indd 10 2010-08-16 2:29:37

Garanti & service

SE

Vanliga frågor och felsökning

Vad gör jag om ugnen inte värms upp?

Kontrollera om någon av följande åtgärder löser problemet:

- Ugnen kanske inte är påslagen. Slå på ugnen.
- Klockan kanske inte är inställd. Ställ in klockan (se avsnittet “Inställning av klocka”).
- Kontrollera om nödvändiga inställningar har utförts.
- En hushållssäkring kan ha gått, eller en kretsbrytare gått sönder. Byt ut säkringarna för att återställa kretsen. Om detta inträffar upprepade gånger skall en auktoriserad elektriker tillkallas.

Vad skall jag göra om ugnen inte värms upp, trots att ugnsfunktion och temperatur har ställts in?

Det kan vara fel på de interna elektriska anslutningarna. Ring ett lokalt servicecenter.

Vad skall jag göra om en felkod visas och ugnen inte värms upp?

Det är fel på den interna elektriska strömkretsen. Ring ett lokalt servicecenter.

Vad gör jag om skärmen för tidsinställning blinkar?

Ett strömavbrott har inträffat. Ställ in klockan (se avsnittet “Inställning av klocka”).

Vad gör jag om ugnslampan inte tänds?

Ugnslampan är trasig. Byt ut ugnsglödlampan (se avsnittet “Byte av lampa”).

Vad gör jag om ugnsfläkten körs utan att den ställts in?

Efter användning körs ugnsfläktarna till dess att ugnen kylts ner. Ring ditt lokala servicecenter om fläkten fortsätter att köras då ugnen kylts ner.

Fel- och säkerhetskoder

Fel- och säkerhetskoder	Allmänna funktioner	Lösning
E-[1)]** **-SE-**	**Ett fel på ugnen kan orsaka bristfällig drift och säkerhetsproblem. Avbryt användning av ugnen omedelbart.**	**Ring ditt lokala SAMSUNG service -center.**
S-01	**SÄKERHETSBRYTARE** Ugnen har varit i drift vid inställd temperatur under en längre tid.	**Stäng av ugnen och avlägsna maten. Låt ugnen svalna innan den används på nytt.**
- - - -	Om du inte har valt lämplig temperatur för läget.	**Välj rätt temperatur för läget. (Se avsnittet “Användning av snabbuppvärmningsläget”)**

1) * se alla nummer eller tecken.

BF641-Series_XEE-00142V-01_SE.indd 11 2010-08-16 2:29:38

Sweden

Korrekt avfallshantering av produkten (elektriska och elektroniska produkter)

Denna markering på produkten, tillbehören och i manualen anger att produkten och de elektroniska tillbehören (t.ex. laddare, headset, USB-kabel) inte bör sorteras tillsammans med annat hushållsavfall när de kasseras. Till förebyggande av skada på miljö och hälsa bör dessa föremål hanteras separat för ändamålsenlig återvinning av beståndsdelarna.

Hushållsanvändare bör kontakta den återförsäljare som sålt produkten eller sin kommun för vidare information om var och hur produkten och tillbehören kan återvinnas på ett miljösäkert sätt.

Företagsanvändare bör kontakta leverantören samt verifiera angivna villkor i köpekontraktet. Produkten och de elektroniska tillbehören bör inte hanteras tillsammans med annat kommersiellt avfall.

SAMSUNG

FRAGOR ELLER KOMMENTARER

LAND	RING	ELLER BESOK OSS ONLINE PA ADRESSEN
AUSTRIA	0810-SAMSUNG (7267864,€ 0.07/Min)	www.samsung.com
BELGIUM	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr(French)
DENMARK	70-70-19-70	www.samsung.com
FINLAND	030-6227 515	
FRANCE	01-48-63-00-00	
GERMANY	01805-SAMSUNG (726-7864 € 0,14/Min)	
ITALIA	800-SAMSUNG (726-7864)	
LUXEMBURG	261-03-710	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0.10/Min)	
NORWAY	815-56-480	
PORTUGAL	80820-SAMSUNG (726-7864)	
SPAIN	902-1-SAMSUNG (902 172 678)	
SWEDEN	0771-726-7864 (SAMSUNG)	
U.K	0845-SAMSUNG (7267864)	
EIRE	0818-717100	
SWITZERLAND	0848-SAMSUNG (7267864, CHF0.08/Min)	www.samsung.com/ch www.samsung.com/ch_fr(french)

Kodnr.: DG68-00142V-01

BF641 SERIES

Built-in Oven

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register

SAMSUNG

BF641-Series_XEE-00142V-01_EN.indd 1 2010-08-16 2:15:16

Using This Manual

EN

Thank you for choosing a SAMSUNG Built - In Oven.
This Owner's Manual contains important information on safety and instructions intended to assist you in the operation and maintenance of your appliance.
Please take the time to read this Owner's Manual before using your oven and keep this book for future reference.
The following symbols are used in the text of this Owner's Manual.

Important

Note

Safety Instructions

Installation of this oven must be performed only by a licensed electrician. The installer is responsible for connecting the appliance to the mains power supply in observance of the relevant safety recommendations.

Electrical safety

If the oven has been damaged in transport, do not connect it.

- This appliance must be connected to the mains power supply only by a **specially licensed electrician**.
- In the event of a fault or damage to the appliance, do not attempt to operate it.
- **Repairs** should be performed by a **licensed technician** only. Improper repair may result in considerable danger to you and others. If your oven needs repair, contact a SAMSUNG Service Centre or your dealer.
- If the supply cord is defective, it must be replaced by a special cord or assembly available from the manufacturer or an authorised service agent.
- Electrical leads and cables should not be allowed to touch the oven.
- The oven should be connected to the mains power supply by means of an approved circuit breaker or fuse. Never use multiple plug adapters or extension leads.
- The rating plate is located on the right side of the door.
- The power supply of the appliance should be turned off when it is being repaired or cleaned.
- Take care when connecting electrical appliances to sockets near the oven.

WARNING

The appliance should be powered down before replacing the lamp to avoid the possibility of electric shock. During oven operation, the interior surfaces become very hot.

BF641-Series_XEE-00142V-01_EN.indd 2 2010-08-16 2:15:16

Safety Instructions (Continued)

EN

Safety during operation

- This oven has been designed only for the cooking of household foods.
- During use, the oven interior surfaces become hot enough to cause burns. Do not touch heating elements or interior surfaces of the oven until they have had time to cool.
- Never store flammable materials in the oven.
- The oven surfaces become hot when the appliance is operated at a high temperature for an extended period of time.
- When cooking, take care when opening the oven door as hot air and steam can escape rapidly.
- When cooking dishes that contain alcohol, the alcohol may evaporate due to the high temperatures and the vapour can catch fire if it comes into contact with a hot part of the oven.
- For your safety, do not use high-pressure water cleaners or steam jet cleaners.
- Children should be kept at a safe distance when the oven is in use.
- Frozen foods such as pizzas should be cooked on the Big grid. If the baking tray is used, it may become deformed due to the great variation in temperatures.
- Do not pour water into the oven bottom when it is hot. This could cause damage to the enamel surface.
- The oven door must be closed during cooking.
- Do not line the oven bottom with aluminium foil and do not place any baking trays or tins on it. The aluminium foil blocks the heat, which may result in damage to the enamel surfaces and cause poor cooking results.
- Fruit juices will leave stains, which can become indelible on the enamel surfaces of the oven.
- Do not rest bakeware on the open oven door.
- This appliance is not intended for use by young children or infirm persons without the adequate supervision of a responsible person ensuring that they are using the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

Disposal Instructions

Disposing of the packaging material

- The material used to package this appliance is recyclable.
- Dispose of the packaging materials in the appropriate container at your local waste disposal facility.

Disposing of old appliances

WARNING

Before disposing of old appliances, make them inoperable so that they cannot be a source of danger.

To do this, disconnect the appliance from the mains supply and remove the mains lead.

To protect the environment, it is important that old appliances are disposed of in the correct manner.

- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates and public refuse disposal sites from your local refuse department or council.

BF641-Series_XEE-00142V-01_EN.indd 3 2010-08-16 2:15:16

EN

Safety instructions for the installation

This oven may be installed only by an approved electrician. The installer is responsible for connecting the appliance to the mains and in so doing for observing the relevant safety regulations.

- Ensure protection from live parts when installing the oven.
- The kitchen cabinet in which the oven is built in must satisfy stability requirements as specified in DIN 68930.

Technical Specifications

Input voltage / frequency	230 V ~ 50 Hz
Volume (usable capacity)	65 L
Output rating	max. 3400 W
Net weight	approx. 33 kg
Weight with packaging	approx. 38 kg
Housing (W x H x D)	595 x 595 x 566 mm
Oven interior (W x H x D)	440 x 365 x 405 mm

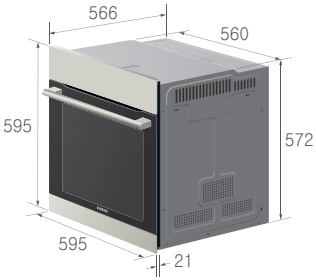

Power Connection

If the appliance is not connected to the mains with a plug, a multi-pole isolator switch (with at least 3 mm contact spacing) must be provided in order to satisfy safety regulations. The power cable (H05 RR-F or H05 VV-F, min. 1.5 m, 1.5 ~ 2.5 mm²) must be of sufficient length to be connected to the oven, even if the oven stands on the floor in front of its built-in cabinet. Open the rear connection cover of the oven with a screwdriver and loosen the screws of the cable clamp before you connect the power lines to the relevant connection terminals. The oven is earthed via the (⏚)-terminal. If the oven is connected to the mains with a plug, this plug must remain accessible after the oven is installed. Samsung will take no responsibility for accidents that originate from a missing or faulty earth connection.

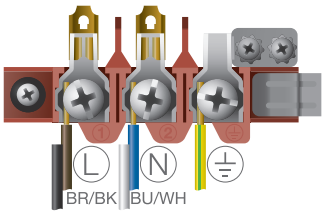

Installation in the Cabinet

This is a built-in oven, which needs to be installed into an upper or lower cabinet.

- Observe minimum distances.
- Fix oven on both sides using screws.

After installation, remove the vinyl protective film from the door to the appliance and the protective film from the interior surfaces of the oven.

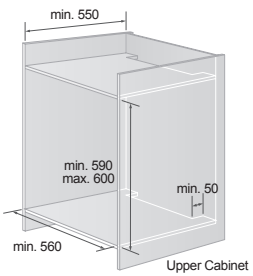

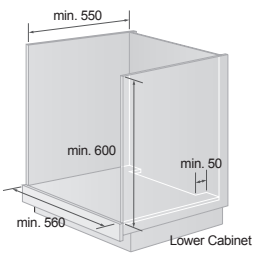

BF641-Series_XEE-00142V-01_EN.indd 4 2010-08-16 2:15:19

Parts and Features

EN

Oven controls

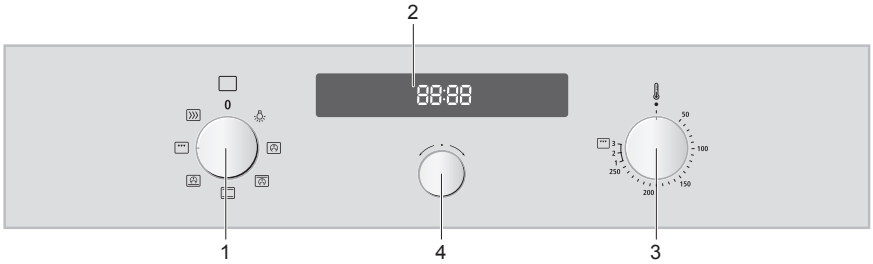

1. Function Select Knob
2. Window Display
3. Temp Control Knob
4. Time Select Knob

✉ **Front design**
The front panel is available in various material and color options including stainless steel, white, black and glass. For purposes of quality improvement, the appearance may be subject to change.

Accessory

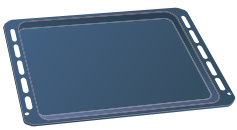

BAKING TRAY
The baking tray could be used for the preparation of cakes, cookies and other pastries.

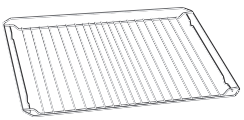

BIG GRID
The big grid should be used for grilling and roasting meals. You could use it with casseroles and other baking pots.

☛ Be sure to attach the accessory correctly to the racks. Trays need to have at least 2 cm space towards the bottom of the oven, otherwise the enamel surface could be damaged.

☛ Be very carefull removing meals and/or accessories out of the oven. Hot meals, accessories and surfaces can burn you!

BF641-Series_XEE-00142V-01_EN.indd 5 2010-08-16 2:15:20

Settings

EN

Time setting

When connecting the power for the first time, please use the product after setting the time.

1 Press **Time Select Knob**, hour figures blink.

2 Turn **Time Select Knob**, set desired time in hours.

3 Press **Time Select Knob**, minute figures blink.

4 Turn **Time Select Knob**, set desired time in minutes.

5 Press **Time Select Knob** to confirm.

Set Timer

1 Turn **Time Select Knob**, set timer time.

2 Press **Time Select Knob** to confirm.

✉ While the timer is operating, the "0" mark on the left side of the screen rotates to indicate the process.

If you want to stop the timer operation, set the timer to 0:00.

While it is operating, press the Time selection knob to display the clock for the current time.

BF641-Series_XEE-00142V-01_EN.indd 6 2010-08-16 2:15:21

Oven Use

EN

Using the Fast Preheating( ) mode

If you use the **FAST PREHEATING** option, you can increase the temperature up to the set value in no time.

This will drastically shorten your waiting time until the preheating is done.

Use the **FAST PREHEATING** option to increase the temperature to the set value until the preheating is completed. Then switch to Cooking mode before proceeding.

However, you do not need to use **FAST PREHEATING** for grilling food.

Using the Cooking mode

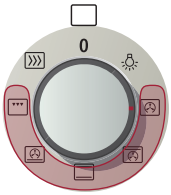

Grill temperature

1 Low

2 Medium

3 High

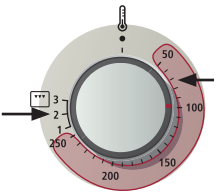

Set the temperature for all cooking other than grilling.

1 Turn **Function Select Knob**, set desired the cooking mode.

2 Select the desired temperature by turning the **Temp Control Knob**.

✉ If you select the Grill function and set the temperature between 50°C and 250°C, or if you select Normal Cooking mode and set the temperature between Grill 1 and 3, you are asked to reset the temperature with a buzzer and popup message.

Oven functions

	Convection The heat generated by the convection is shared evenly in the oven by fans. This function should be used for frozen dishes and baking. Suggested temperature: 170°C
	Top Heat + Convection The heat generated by the upper heating system and the convection is shared evenly in the oven by fans. This function should be used for roasting crusty dishes like meat. Suggested temperature: 190°C
	Conventional Heat is emitted from the upper and lower heating system. This function should be used for standard baking and roasting of almost any type of dishes. Suggested temperature: 200°C
	Bottom Heat Convection The heat generated by the lower heating system and the convection is shared evenly in the oven by fans. This function should be used for pizzas, bread and cakes. Suggested temperature: 190°C
	Large Grill Heat is emitted from the large area grill. This function should be used for scalloped dishes like lasagne and grilling meat. Suggested temperature: Medium

BF641-Series_XEE-00142V-01_EN.indd 7 2010-08-16 2:15:22

EN

Test dishes

According to standard EN 60350

1. Baking

The recommendations for baking refer to preheated oven.

Type of Food	Dish & Notes	Shelf level	Cooking Mode	Temp. °C	Cooking time min
Small Cakes	Baking tray	2	Conventional	170-190	15-25
Fatless Sponge Cake	Baking tin on Big grid (Dark coated, ø 26 cm)	1	Conventional	160-180	25-35
Apple Pie	Big grid + Baking tray + 2 Springform cake tins (Dark coated, ø 20 cm)	1+3	Convection	170-190	80-100
	Big grid + 2 Springform cake tins (Dark coated, ø 20 cm)	1 Placed diagonally	Conventional	180-200	75-90

2. Grilling

Preheat the empty oven for 5 minutes using Large Grill function.
Use this function with the maximum temperature setting of high.

Type of Food	Dish & Notes	Shelf level	Cooking Mode	Temp. °C	Cooking time min
White Bread Toasts	Big grid	5	Large Grill	high	1st 1-2 2nd 1-1 1/2
Beef Burgers	Big grid Baking tray (to catch drippings)	4 3	Large Grill	high	1st 7-10 2nd 5-8

BF641-Series_XEE-00142V-01_EN.indd 8 2010-08-16 2:15:22

Cleaning and Care

EN

Hand Cleaning

☛ Make sure the oven and accessory is cool before cleaning.

Oven Interior

- For cleaning the interior of the oven, use a clean cloth and a mild cleaning agent or warm soapy water.
- Do not hand-clean the door seal.
- Do not use scouring pads or cleaning sponges.
- To remove stubborn soil, use a special oven cleaner.
- The cover casing should be cleaned using hot water, detergent and a soft nylon brush.

Do not use abrasive cleaning agents, hard brushes, scouring pads or cloths, steel wool, knives or other abrasive materials.

Oven Exterior

- For cleaning the exterior of the oven, use a clean cloth and a mild cleaning agent or warm soapy water.
- Dry with kitchen roll or a dry towel.
- Do not use scourers, caustic cleaners or abrasive products.

Stainless steel oven fronts

- Do not use steel wool, scouring pads or other abrasives. They may damage the finish.

Aluminium oven fronts

- Wipe the surface gently with a soft clean cloth or microfiber cloth and a mild window cleaning detergent.

Accessory

Wash the accessory after every use and dry it with a kitchen towel. If necessary, lay in warm soapy water for about 30 minutes for easier cleaning.

Door Removal

For normal use, the oven door must not be removed but if removal is necessary, for example, for cleaning purposes, follow these instructions. CAUTION: The oven door is heavy.

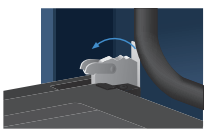

1 Open the door and flip open the clips at both hinges completely.

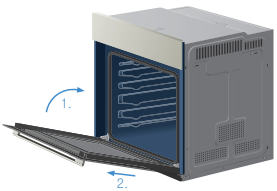

2 Close the door by approximately 70°. With both hands, grasp the sides of the oven door at its middle and pull-lift until the hinges can be taken out.

BF641-Series_XEE-00142V-01_EN.indd 9 2010-08-16 2:15:26

EN

Door Glass Removal

The oven door is equipped with three sheets of glass placed against each other. These sheets can be removed for cleaning.

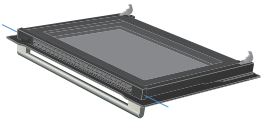

1 Remove the two screws on the left and right sides of the door.

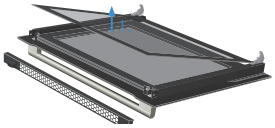

2 Detach the covering and remove glass 1 from the door.



3 Lift glass 2 and remove the two holder glass rubber from the top of the sheet, then remove glass 3. Clean the sheets with warm water or washing-up liquid and polish dry them with a soft clean cloth.

- The Door-Glass is different from 2EA to 4EA model by model. But, the method of the disassembly and assembly is same.
- When assembly the inner glass 1, put printing to direction below.

Bulb Exchange

Danger of electric shock!
Before replacing any of the oven bulbs, take the following steps:

- Switch oven Off.
- Disconnect the oven from the mains.
- Protect the oven light bulb and the glass cap by laying a cloth on the bottom of the oven compartment.
- Bulbs can be purchased from the SAMSUNG Service Centre.

Rear oven lamp

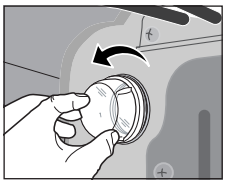

1. Remove cap by turning anticlockwise and remove the metal ring, the sheet ring and clean the glass cap. If necessary, replace the bulb with a 25 watt, 230 V, 300 °C heat-resistant oven light bulb.
2. Clean the glass cap, the metal ring and the sheet ring if necessary.
3. Fit the metal and the sheet ring to the glass cap.
4. Place glass cap where you have removed it in step 1 and turn it clockwise to keep it in place.

BF641-Series_XEE-00142V-01_EN.indd 10 2010-08-16 2:15:30

EN

FAQs and Troubleshooting

What should I do if the oven doesn't heat up?

Check to see if one of the following actions resolves the issue:

- The oven may not be switched on. Switch the oven on.
- The clock may not be set. Set the clock (see section "Time setting").
- Check to see if the required settings have been applied.
- A household fuse may have blown or a circuit breaker may have tripped. Replace the fuses or reset the circuit. If this happens repeatedly, call an authorised electrician.

What should I do if, even though the oven function and temperature have been set, the oven does not heat up?

There may be problems with the internal electrical connections. Call your local service centre.

What should I do if an error code appears and the oven does not heat up?

There is a fault in the internal electrical circuit connection. Call your local service centre.

What should I do if the time display is blinking?

There was a power failure. Set the clock (see section "Time setting").

What should I do if the oven light doesn't illuminate?

The oven light is faulty. Replace the oven light bulb (see section "Bulb Exchange").

What should I do if the oven's fan is running without having been set?

Following use, the oven's fan runs until the oven has cooled down. Call your local service centre if the fan continues to run after the oven has cooled down.

Error and Safety codes

Error and Safety codes	General Functions	Solution
E-** [1)] **-SE-**	**An error of the oven may cause low performance and problems in safety. Stop using the oven immediately.**	**Call local SAMSUNG service centre.**
S-01	**SAFETY SHUTOFF** Oven has continued operating at set temperature for prolonged time.	**Turn oven off and remove food. Allow oven to cool before using again.**
- - - -	If you did not select an appropriate temperature for the mode.	Select the correct temperature for the mode. (see section "Using the Fast Preheating mode")

1) * refers to all numbers or characters.

BF641-Series_XEE-00142V-01_EN.indd 11 2010-08-16 2:15:30

English

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

SAMSUNG

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0810-SAMSUNG (7267864,€ 0.07/Min)	www.samsung.com
BELGIUM	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr(French)
DENMARK	70-70-19-70	www.samsung.com
FINLAND	030-6227 515	
FRANCE	01-48-63-00-00	
GERMANY	01805-SAMSUNG (726-7864 € 0,14/Min)	
ITALIA	800-SAMSUNG (726-7864)	
LUXEMBURG	261-03-710	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0.10/Min)	
NORWAY	815-56-480	
PORTUGAL	80820-SAMSUNG (726-7864)	
SPAIN	902-1-SAMSUNG (902 172 678)	
SWEDEN	0771-726-7864 (SAMSUNG)	
U.K	0845-SAMSUNG (7267864)	
EIRE	0818-717100	
SWITZERLAND	0848-SAMSUNG (7267864, CHF0.08/Min)	www.samsung.com/ch www.samsung.com/ch_fr(french)

Code No.: DG68-00142V-02